




DIGIGARD

OPERATING INSTRUCTIONS

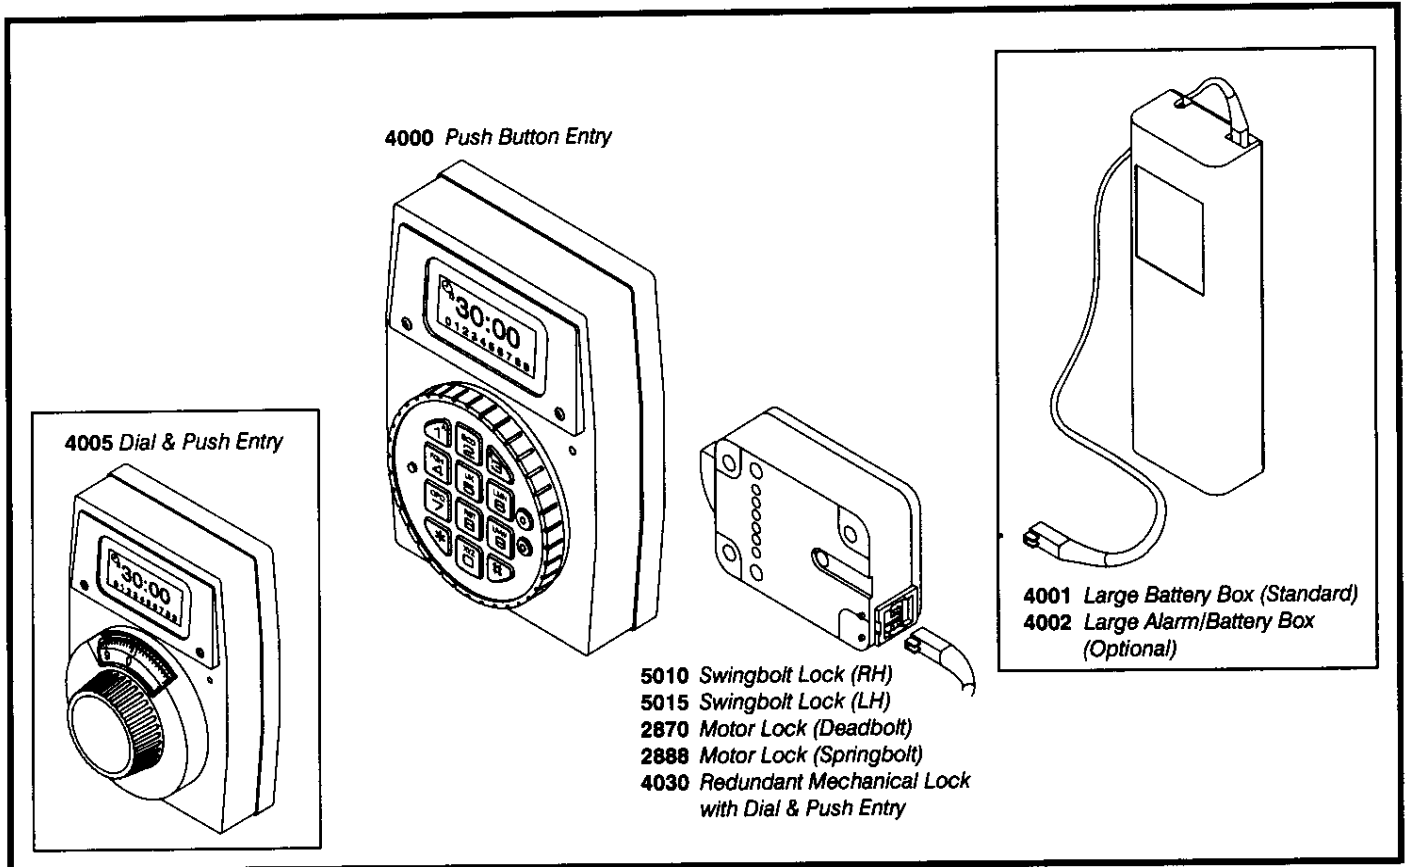

FEATURES *(May be activated, or changed, at any time by Authorized Service.)*

- NUMBER OF SUB-USERS** *(Sub-User numbers range from 1 to 8.)*
Primary user plus additional sub-users. (Pre-set)
- MANAGER MODE** *(If feature is activated, User #0 displayed on LCD - see Add Sub-Users.)*
Manager may perform the following: Add, Temporarily Disable, or Remove sub-users, Set Time Lock, Run Audit Trail.
- DUAL COMBINATION**
Two combinations required to open.
- SILENT SIGNAL ALARM** *(Optional Alarm/Battery Box Required.)*
Duress Signal if last number of combination(s) entered one number higher or one number lower.
- TIME LOCK**
Lock period from 1 minute to 99 hours, 59 minutes (00:01 to 99:59).
- TIME DELAY** *(Preset "Delay" and "Open" Time periods.)*
Delay Time period minutes Open Time period minutes


STANDARD FEATURES *(Always Available.)*

- AUDIT TRAIL**
Primary user or Manager may track all user operations up to latest 99 events.
- WRONG TRY PENALTY**
Entry of four consecutive invalid combinations, 5-minute delay period will start. Lock signals at 10 second intervals. At end of penalty period, entry of two more consecutive invalid combinations, 5-minute delay period will restart.

ADD SUB-USERS - Function Code 1 *(Primary User or if Manager feature activated.)*


LCD DISPLAYS

- Enter Primary or Manager combination. HOLD DOWN LAST DIGIT OF COMBINATION until LCD displays:
- **PRESS 1** for function. LCD displays sub-user numbers. Example: Unassigned numbers do not flash. Assigned numbers do not appear. Disabled user numbers flash.
- Enter any Sub-User number, **example:** Sub-User #6. **PRESS 6.**
- Enter sub-user combination TWICE.
- If combination is valid, LCD displays:
 - If combination invalid, Lock signals three times and LCD goes blank.

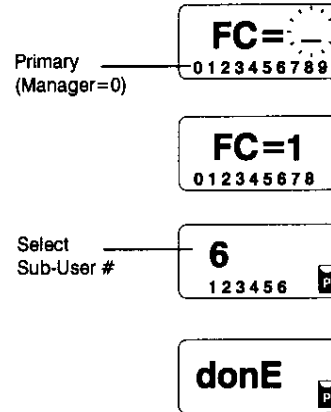


TEMPORARILY DISABLE USERS - Function Code 2 *(Primary User or if Manager feature activated.)*

- Enter Primary or Manager combination. HOLD DOWN LAST DIGIT OF COMBINATION until LCD displays:
- **PRESS 2** for function. Only active numbers will appear. Example:
- Enter Sub-User number to be disabled, **example:** Sub-User #6. **PRESS 6.** User is temporarily disabled. Continue disabling users OR TO EXIT;
 - Wait until LCD goes blank OR
 - Enter disabled user number again. LCD will display error message then go blank.

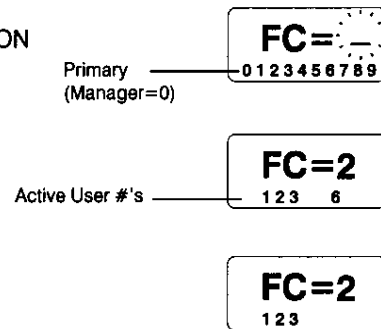


REINSTATE DISABLED USERS - Function Code 1 *(Primary User or if Manager feature activated.)*

- Enter Primary or Manager combination. HOLD DOWN LAST DIGIT OF COMBINATION until LCD displays:
- **PRESS 1** for function. LCD displays sub-user numbers. Example: Unassigned numbers do not flash. Active numbers do not appear. Disabled user numbers flash.
- Enter Sub-User number to be reinstated, **example:** Sub-User #6. **PRESS 6.** User is reinstated and has access. Continue reinstating users OR TO EXIT;
 - Wait until LCD goes blank OR
 - Enter reinstated user number again. LCD will display error message then go blank.

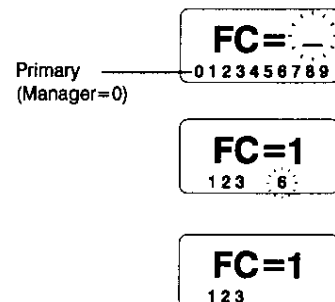


REMOVE USERS - Function Code 3 *(Primary User or if Manager feature activated.)*

- Enter Primary or Manager combination. HOLD DOWN LAST DIGIT OF COMBINATION until LCD displays:
- **PRESS 3** for function. LCD displays sub-user numbers. Example: Only assigned user numbers will appear.
- Enter Sub-User number to be deleted, **example:** Sub-User #6. **PRESS 6.** User is permanently removed. Continue removing users OR TO EXIT;
 - Wait until LCD goes blank OR
 - Enter deleted user number again. LCD will display error message then go blank.

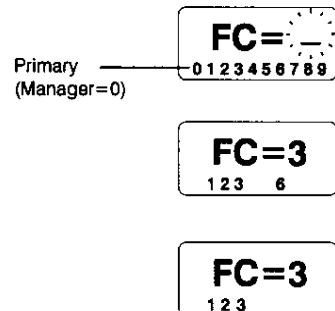


CHANGING COMBINATION(S)

- Enter Six Zero's (0-0-0-0-0-0)
- Enter OLD combination.
- Enter NEW combination TWICE. If combination is valid, LCD displays:
– If combination is invalid, Lock signals three times and LCD goes blank.
- Verify combination before closing the door.

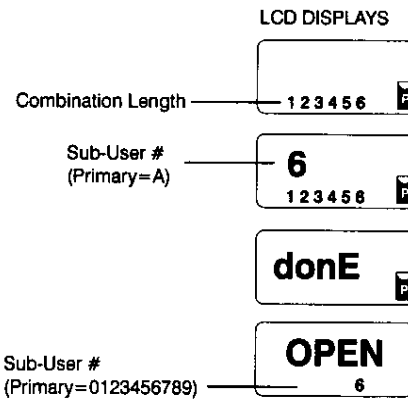

DUAL COMBINATION *Any two valid combinations required to open. (If feature is active.)*

- Enter first valid combination.
- Enter second valid combination.

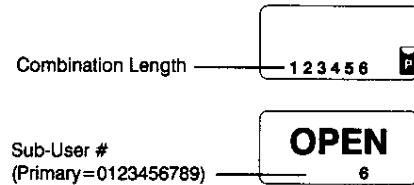




SILENT SIGNAL ALARM *(If feature is active AND optional Alarm/Battery Box connected.)*

- Enter last digit of any valid combination one number higher or one number lower, **example:**
Combination=1-2-3-4-5-6 Duress Combination=1-2-3-4-5-7 or 1-2-3-4-5-5

TIME DELAY *(During delay period, performing user functions or running audit trail will abort delay period.)*

NOTE: LCD displays Delay period time values counting down and Open period time values counting up.



 
 
 
- Enter valid combination. Delay period starts and LCD displays pre-set delay time.
– Valid combination entered during delay = Delay period restarts.
– Invalid combination entered during delay = Delay period aborts.
- At end of Delay period, Open period starts and LCD displays:
– Lock signals at 10-second intervals until expiration of preset Open period.
– Invalid combination entered during Open time period = Open continues to expiration.
– Four consecutive invalid combinations = Open period aborts and Wrong Try Penalty starts.
- During Open period, enter valid combination(s). LCD displays:



SET TIME LOCK - Function Code 9 *(If feature is active.)*

WARNING: If activated, Lock period settings are active IMMEDIATELY.

     - Enter Primary or Manager combination. HOLD DOWN LAST DIGIT OF COMBINATION:
- **PRESS 9** for function.
- Select LOCK period, in hours and minutes. Position will flash until value entered.
EXAMPLE: To set 10 hours, 5 minutes LOCK.
At position 1, **Press 1**. Position 2 will flash. **Press 0**. Position 3 will flash.
Press 0. Position 4 will flash. **Press 5**. ALL NUMBERS WILL THEN FLASH.
- TO ACTIVATE, **HOLD 9** WHILE NUMBERS ARE FLASHING until LCD displays:
IMPORTANT: If another key is hit, or zero values entered, Time Lock is not activated.
- If Time Lock is activated, on entry of primary/manager combination, LCD displays time left until Open period.



AUDIT TRAIL - Function Code 7 (Primary User of if Manager feature activated.)


Stores up to 99 events. Last event is first shown on LCD.

- Enter Primary or Manager combination. HOLD DOWN LAST DIGIT OF COMBINATION:
- **PRESS 7** for function. Information is presented in the following format:
Event Numbers = 01 to 99.

Event Codes:

- 0 Open
- 1 Add/Reinstate User or Change combination
- 2 Temporarily Disable or Remove User
- 3 Lock Failure
- 4 Wrong Try Penalty activated
- 5 Features added/changed (by Authorized Service only)
- 6 Set Time Lock
- 7 Access Denied, Time Lock activated

LG icon With Any event Code - Silent Signal Alarm activated.

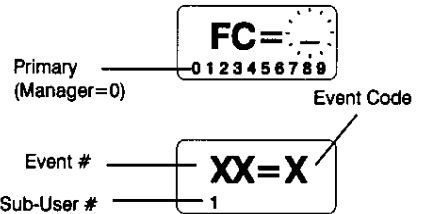

To scroll forward, PRESS 7. When all events have been shown, no more screens will appear.

To scroll backward, PRESS 8.

To exit audit trail, Press any other number.

CHANGING BATTERIES

- **Repeated beeping during an opening indicates Batteries are Low.**
- Replace immediately. Use six (6) 1.5 volt Alkaline Size C batteries.
- To change batteries, pull Battery Cover off.

OPTIONS

4002 Large Alarm/Battery Box Shown (Optional)

4002 ALARM CONNECTIONS

Alarm Relay
Out - 50 VDC @ 0.25 AMP MAX
Input - 5-12 VDC @ 20 mAmp Max

Inputs Disable or Remote Override

Alarm Relay
Jumper Position
NO - (right pos.)
NC - (left pos.)

