


# Bravo USA

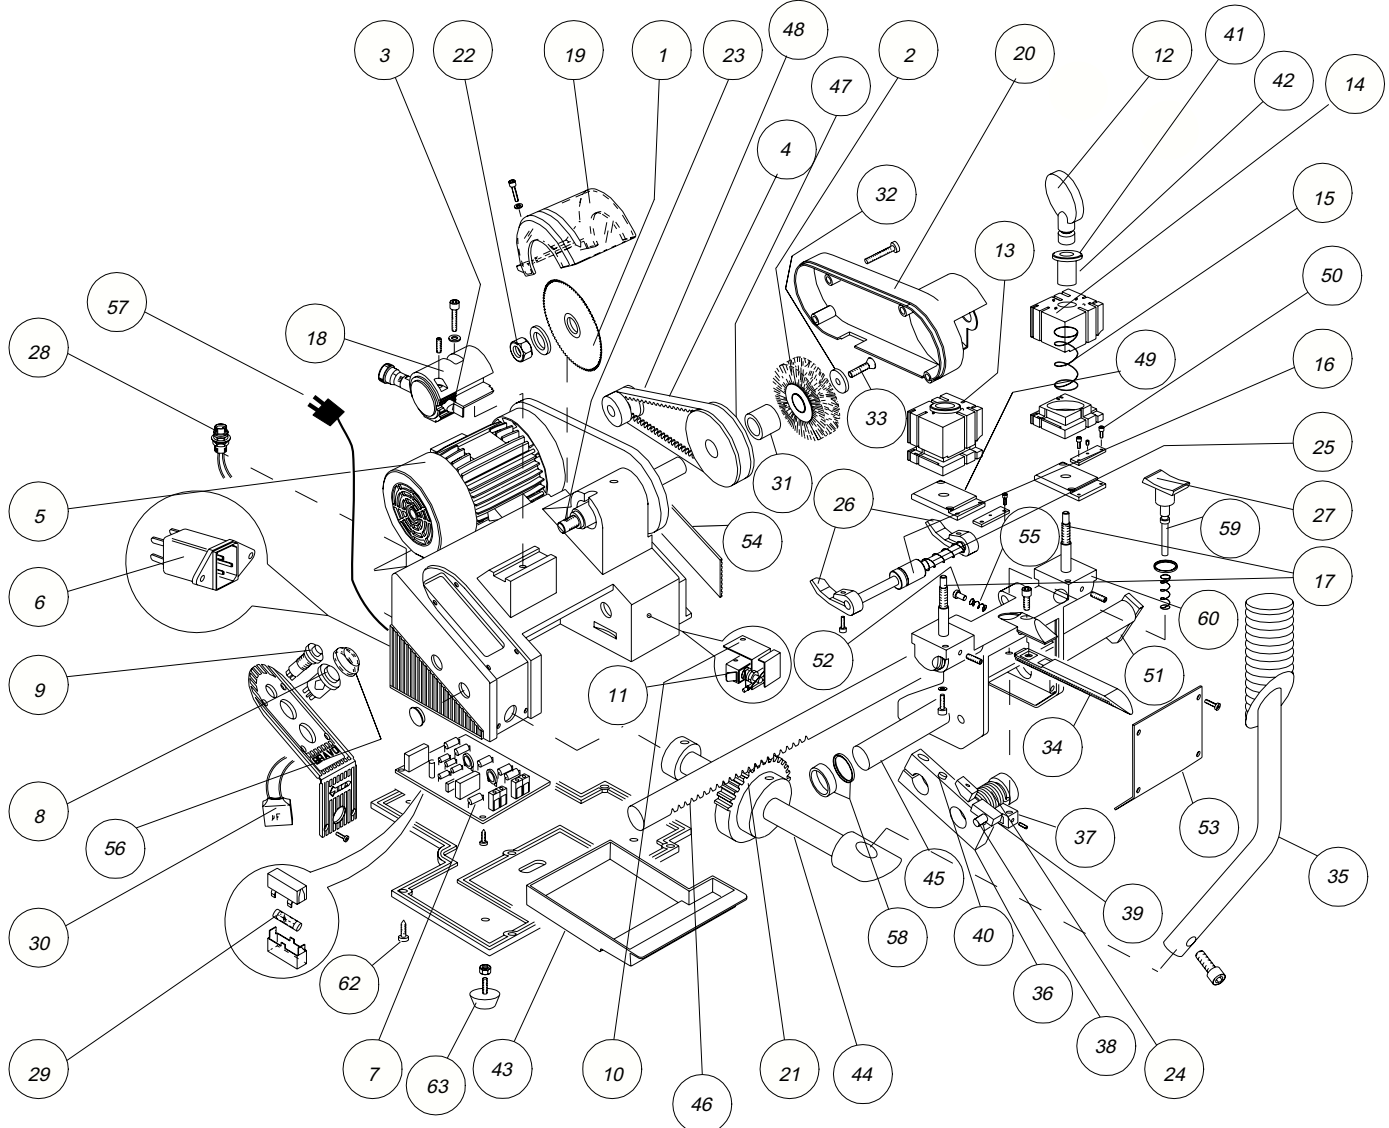

# Bravo USA

	Description	Part Number	Item Number		Description	Part Number	Item Number
23	Cutter	D400875ZZ	BC0496XXXX	44	Lever Shaft	D404920BA	BJ0843XXXX
32	Brush	D301840ZZ	BJ0429XXXX	11	Carriage Shaft (Main)	D404917LA	129242
3	Tracer Point	D404866BA	BJ0355XXXX	46	Carriage Shaft (geared)	D404918LA	BJ0795XXXX
4	Belt	D301681ZZ	BJ0420XXXX	47	Cutter Shaft Pulley	D401773BA	BJ0720XXXX
5	Motor	D505692AA	BJ0400XXXX	48	Motor Pulley	D401977BA	129240
6	Bravo Outlet	D307257ZZ	BJ0467XXXX	49	Base Plate (Vise Jaw)	D405279BA	BJ0553XXXX
7	Electric Board	D407287ZZ	BJ0568XXXX	50	Aligning Plate (Vise Jaw)	D405281BA	BJ0554XXXX
8	Main Switch	D305444ZZ	BJ0455XXXX	51	Brass Tab	D405288LA	BJ0721XXXX
9	Brush Switch	D909416ZR	BJ0087XXXX	52	Gauge Fork Locking Pin	D405283BA	BJ0556XXXX
11	Microswitch (only)	D300807ZZ	BJ0046XXXX	53	Cover Plate	D404948VZ	BJ0365XXXX
12	Jaw Handle	D902170ZR	BJ0223XXXX	54	(Right) Lower Cover	D105054FA	BJ0718XXXX
13	Jaw Set (One jaw assembly)	D507215BA	BJ0402XXXX	55	Spring Stake	D405616ZZ	BJ0564XXXX
15	Jaw Spring	D401606ZZ	BJ0523XXXX	56	Plastic Covers (Buttons)	D304615ZZ	BJ0448XXXX
16	Gauge Set (complete)	D905318ZR	BJ0141XXXX	57	Power Cord	D706590ZB	BJ0385XXXX
17	Jaw Stud	D405278LA	BJ0552XXXX	58	Carriage Shaft Bushings	D505301ZZ	BJ0398XXXX
18	Tracer Point Housing	D504862ZM	BJ0396XXXX	59	Carriage Button Pin	D404941BA	BJ0361XXXX
19	Protective Guard	D104923FA	BJ0012XXXX	n/s	Carriage (Casting)	D104747LA	BJ0010XXXX
20	Belt Guard	D905321ZR	BJ0143XXXX	70	Carriage Assembly	D907217ZR	BJ0164XXXX
21	Gear	D404921ZF	BJ0358XXXX	62	Bottom Cover Screws	D202065ZZ	BJ0031XXXX
22	Cutter Nut	D901249ZR	BJ0263XXXX	63	Rubber Foot	D300025ZZ	BJ0036XXXX
23	Cutter Shaft Set	D905316ZR	BJ0140XXXX	n/s	Tool Pack	D607325ZC	BJ0722XXXX
24	Carriage Spring	D404915ZZ	BJ0356XXXX	n/s	Allen Key 2mm	D300221ZZ	BJ0648XXXX
25	Gauge Spring	D405454ZZ	BJ0561XXXX	n/s	Allen Key 2.5mm	D300222ZZ	BJ0649XXXX
26	Gauge (Tabs)	D904947ZR	BJ0137XXXX	n/s	Allen Key 3mm	D300223ZZ	BJ0650XXXX
27	Push Button (Red)	D105171FA	BJ0013XXXX	n/s	Allen Key 4mm	D300224ZZ	BJ0651XXXX
N/S	Lamp Socket & Wires	D710070ZB	BJ0300XXXX	n/s	Allen Key 5mm	D300225ZZ	BJ0652XXXX
29	Fuses 6.3amps	D906749ZR	BJ0152XXXX	n/s	Allen Key 6mm	D300226ZZ	BJ0653XXXX
30	Suppressor (capacitor)	D909414ZR	BJ0783XXXX	n/s	Steel Tip Stop Set	D402302BA	BJ0547XXXX
31	Spacer (Brush Assy)	D405300BA	BJ0557XXXX	n/s	Calibrating Setting Blanks	D401561BA	BJ0515XXXX
32	Washer (Brush Assy)	D400847BA	BJ0488XXXX	n/s	"Steel Pin set, 1.2mm/1.7mm	D401554ZZ	BD0094XXXX
33	Screw (Brush Assy)	D200832ZZ	BJ0028XXXX	n/s	Cutter Locking Bar	D400754BA	BJ0486XXXX
34	Carriage Handle	D404940ZF	BJ0360XXXX	n/s	Wrench 19mm	D3000783ZZ	BJ0647XXXX
35	Carriage Lever	D404922ZF	BJ0359XXXX	n/s	Lamp Without Bulb	D709990ZB	BJ0294XXXX
36	Carriage Stop	D404919BA	BJ0357XXXX	n/s	Bravo USA Manual	D407270XA	132015
37	Carriage C Block	D404942BA	BJ0362XXXX	n/s	Bravo Box w/Foam	B1111-0007	B1111-0007
38	Carriage Relay Pin	D404944BA	BJ0364XXXX	n/s	Bravo Stop Block Pin	D200294ZZ	BJ0734XXXX
39	Carriage Stop Block	D404943BA	BJ0363XXXX	n/s	Gauge Shaft Barrel	D404946BA	BJ0723XXXX
40	Carriage Adjusting Screw	D204932ZZ	BJ0032XXXX	n/s	Rubber Bushing Seal (Carriage)	D304076ZZ	132086
41	Washer (Vise Jaw)	D301397BA	BJ0068XXXX	n/s	Bravo II Conversion Kit	D717911ZB	BH0039XXXX
42	Sleeve (Vise Jaw)	D405282BA	BJ0555XXXX	n/s	Bravo II Complete Housing	D917909ZR	BH0040XXXX
43	Chip Tray	D104914FA	BJ0011XXXX				