


MODEL 3045

HAND-HELD PROGRAMMER OPERATING INSTRUCTIONS

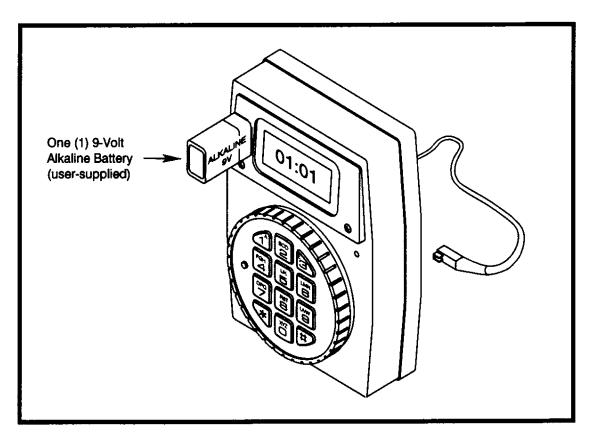

FEATURES FEATURES CODES

MANAGER MODE 0 Add/Temporarily Disable/Remove second user. TIME DELAY OVERRIDE 1 Ability to add second combination to override Delay period. **DUAL COMBINATION** 2 Two combinations required to open. SILENT SIGNAL ALARM (Optional Alarm Box Required) 3 Duress Signal if last number of combination(s) entered one number higher or one number lower. REMOTE OVERRIDE SIGNAL (Optional Alarm Box Required) 7 Two combinations OR remote signal plus primary user combination required to open.

01:01

 
TIME DELAY (LCD displays Delay/Open time.)

"Delay" 1-99 minutes, "Open" 1-19 minutes.


SET PROGRAMMER SWITCHES AND FEATURE TRANSMISSION

(See Switch Diagram on back page.)

- Turn ON switch(es) to select features and/or Delay and Open time periods.
 - Only Silent Alarm and Time Delay may be used with other features.
- Connect Programmer to Combination Lock.
- INITIAL SET-UP: Enter factory-set Programmer combination, 1-2-3-4-5-6. FIELD SET-UP: Enter lock's Primary combination.
 - During combination entry
 LCD will display:



 - If combination is invalid, LCD will display "Err" then go blank. If 4 consecutive invalid combinations entered, LCD displays "Pen".
 5-minute Time Penalty starts.
- If combination is valid, LCD displays Programmer switch settings as follows: (See Page 1 for feature codes.)



- Incorrect feature selection: Applicable Feature Codes will flash.
 PRESS 9 to escape. Reset switches and restart procedure.
- To transmit to lock, Press 0 and HOLD until LCD displays:

donE

 
• Faulty transmission to lock, LCD displays:

FAIL


- Check lock connection, switch settings, batteries, and restart procedure.

TO VERIFY SWITCH SETTINGS AT ANY TIME:

 Connect Programmer to lock. Enter lock's primary combination. LCD displays Programmer Setting. Example:



 • PRESS 1. LCD displays lock setting. Example:




If Programmer is not connected to lock, PRESS 33.
 LCD will display Programmer switch settings.


HAND-HELD PROGRAMMER/LOCK CONNECTIONS

COMBOGARD

MODEL 33E-1 Deadbolt MODEL 33E-2 Springbolt

MODEL 3045 Hand-Held Programmer

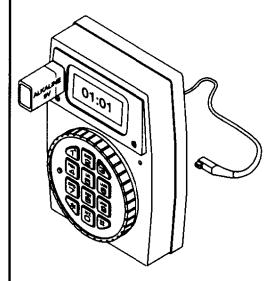

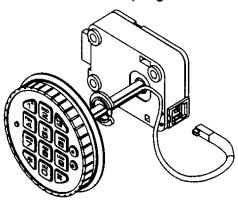

SAFEGARD


5010 Swingbolt Lock (RH)


5015 Swingbolt Lock (LH)

2870 Motor Lock (Deadbolt)

2888 Motor Lock (Springbolt)

2441 Redundant Mechanical Lock

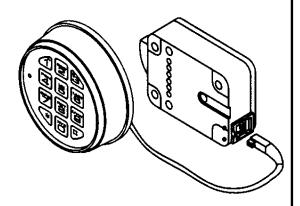

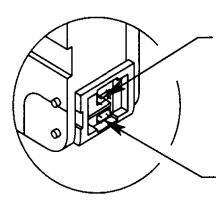

Connection to Battery Box or

Alarm/Battery Box (Optional)
(See Lock Operating Instructions)

Connection to Programmer

