



LG AUDIT

66E SERIES COMBINATION LOCK CONTROL CODE OPERATING INSTRUCTIONS

THE CONTROL CODE DOES NOT OPEN THE LOCK!
CODE IS FACTORY SET TO 5-5-5-5-5-5-5
TO PERFORM ANY ACTION THE CODE MUST BE CHANGED FIRST.

For all operations, double beep means entry is valid or accepted.
Triple signal means entry is invalid or not accepted.

- If four consecutive invalid codes entered, 5-minute time penalty starts (Any Keystroke).
- At expiration of penalty period, 2 more consecutive invalid entries, time penalty restarts.

FUNCTION ENTRY PROCEDURE

| WITHOUT KEY | WITH KEY (use <u>any</u> key) |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Press and HOLD 0 until double signal. | Press and HOLD 0 until double signal. |
| | |
| <ul style="list-style-type: none"> • Enter code and HOLD down last digit • Unit will double signal twice and LED stays ON. • Follow additional instructions for each function as shown below. | <ul style="list-style-type: none"> • Enter code • HOLD in key • Unit will double signal twice and LED stays ON. • Follow additional instructions for each function as shown below. • Key procedures are shown in brackets []. |

If any error occurs () existing setting remains, wait 20 seconds and start at beginning of Function Entry Procedure.

CHANGING CODES - FUNCTION 0

- Follow Function Entry Procedure
- **Press 0.** - Unit will double signal.
- Enter new Code [and key]
- Confirm Code [and key]




RECEIVE AUDIT - FUNCTION 7

This function requires LG Audit interface and software.

- Follow Function Entry Procedure
- **Press 7.** - Unit will signal once and Audit will be sent.


REPLACE MANAGER KEY - FUNCTION 4

(If Key option active)

- Follow Function Entry Procedure
- **Press 4.** - Unit will signal once. 
- Manager can now open the lock with any key.
- Manager must change his code to perform Functions

RESET LOCK FEATURE - FUNCTION 8


CAUTION: Lock will be reset to Pre-Setup Mode.
Pressing [1] will open the lock for testing purpose.
Use 'LG Audit Setup' PC-software and the Audit interface to perform new lock setup.
Key option can not be changed with this Function.

- Follow Function Entry Procedure
- **Press 8.** - Unit will signal twice. 
- Enter Manager Code [and key]
(Manager code must be changed from Factory settings prior to Reset.)
- Unit will give a long signal
- Lock in Pre-Setup Mode.

CHANGING BATTERIES

- Repeated Beeping during an opening indicates that battery is Low and needs immediate replacement!
- Use one (1) 9-Volts Alkaline Battery or six (6) 1.5-Volts Alkaline Batteries Size C

Model 2788 Battery Box
(Standard)

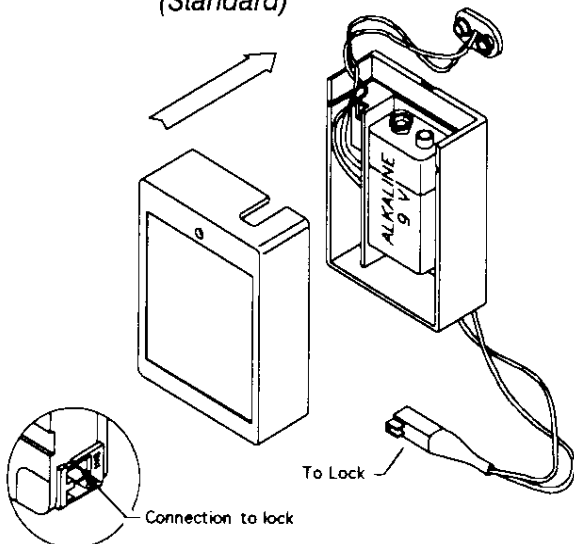

Model 4001 Large Battery Box
(Optional)

