



REXA 2000 PLUS VB (REXA 4) CUTTER REPLACEMENT

1. Turn machine off and unplug it.
2. Remove 2 screws (2.5mm head) from Cutter Guard.
3. Insert 4mm rod into hole to right of cutter to stabilize cutter axle. Use 24mm wrench to loosen and remove cutter nut.



4. Install new cutter with lettering facing out.



5. Reinstall and tighten cutter nut.
6. Reinstall cutter guard.
7. Check space and depth of cut—adjust as needed.